

«SATURN-433/9600-11»

1.

1.1

«SATURN-433/9600-11»

RS-485 RS-232 9600
 / 4 ,
 433 .

1.2

SATURN-433/9600-11 SATURN-433/9600-11P	5±0,5 5±0,2	
RX/TX: SATURN-433/9600-11 SATURN-433/9600-11P	30/45 30/260	
	9	
SATURN-433/9600-11 SATURN-433/9600-11P	10 400	
	50	
(5)	433,05-434,79	
	9600	/
	8N1,8E1,8O1,8N2	
	,	
	,	
	250	
SATURN-433/9600-11 SATURN-433/9600-11P SATURN-433/9600-11-2b SATURN-433/9600-11P-2b	860 860 430 430	
	RS485, RS232 , TTL	
SATURN-433/9600-11 SATURN-433/9600-11P	1 4	

	4	
	6	
	-40° +85°	°


1.3



:
- 20

:
SATURN-433/9600-11 - 81
SATURN-433/9600-11P - 96
- SMA
- NC-4M

1.4

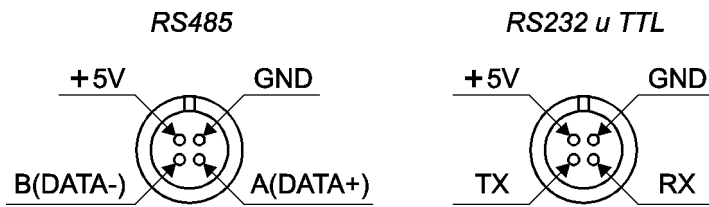

1.5

,

2.

, (, . ,) .
 .
 .
 “ - ” , - “ - ”
 . () , () .

2.1

. RS485 TTL – RS232 COM ,
 Terminal”. - COM : “Hyper

9600
8

1

, 123454321. “Hyper Terminal” 3 :

Address

000

Transport

001 000 000 000 000 000 000 000 000 000 000 000 000 000 000 000 000

000 000 000 000 000 000 000 000 000 000 000 000 000 000 000 000

000 000 000 000 000 000 000 000 000 000 000 000 000 000 000 000

5 chanal

Address

. Address 000

000 () . Address 001

250

, Transport 000 () .
 - ,

Transport (-) 001 047,

Transport.

Transport (-) 000,

“ - ’ . . ”, “ ”,

:

Transport

001 000 XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX
" "

Transport

003 002 003 004 XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX
"04- 02- 03- "

Transport

004 002 003 004 000 XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX
" " 02- , 03- 04- "

Transport

000 XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX XXX
, . . Transport

"4" "6" (-)

"+" "-"

(1 5) "k".
"z"

2.2

8N1 (8

, 1).

COM

RS232

RS485 TTL -

“Hyper

Terminal”.

- - - COM :

9600

8

1

3

123454323. “Hyper Terminal” :

8N1

"6"

8N1,8E1,8O1,8N2.

2.3

COM
RS232
RS485 TTL –
Terminal”.
COM : “Hyper
9600
8
1
12345654. “Hyper Terminal” 3 :
-- --
(“Hyper Terminal”
25 27
:

*
:
SATURN-433/9600-11P
SATURN-433/9600-11P